



## Model 5210 Installation and Configuration Instructions

### Accessing the front panel config' editor

Press the configure/log and Stop/Reset buttons simultaneously. The LCD configure indicator will flash to indicate that the module is in 'configuration mode'. Release the Stop/Reset button and the configure/log button. If a PIN number has been set, press + / - to set the first digit, then press to adjust the next digit. Repeat this until all four digits have been entered. The first configurable parameter is now displayed. Pressing the + or - buttons will cycle through the parameters.




**NOTE:-** To exit the front panel configuration editor at any time, press the Stop/Reset button. Ensure you have saved any changes you have made by pressing the button first.

### Editing an analogue value

Access the front panel config editor as detailed above. Press the +/- buttons to view the parameter you wish to change (see parameter table overleaf). Press the button to enter adjust mode. The value to be adjusted will flash. Press the +/- buttons to adjust the parameter to the desired value. Press the button to 'save' the value. The value will stop flashing to confirm that it has been saved. To select another value to edit, press the + button. Continuing to press the +/- buttons will cycle through the available parameters.

### Editing the time

The date/time should initially be set using the 5200 series configuration software. However there may be certain circumstances where a minor change to the module's time is required. One such instance is correction for daylight saving. Access the front panel config editor as detailed above. Press the + button until the calendar is shown :

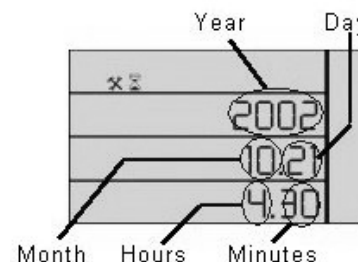

To edit the time, press the button. The time, 4.30 in this example, will begin flashing. Press the + or - buttons to adjust the time in one minute steps until the desired time is shown. Press the button to save the change. The time stops flashing to confirm that it has been successfully stored.  
Example : This display is showing a time of 4:30 on 21<sup>st</sup> October 2002.

Config' Section	Parameter	Type	Icons displayed	
Analogue senders	Low Pressure	Trip		
	Low Pressure	Pre Alarm		
	High Temperature	Pre Alarm		
	High Temperature	Trip		
	Low Fuel Level %	Pre Alarm		
Calendar	Date/time	Date/time		
Timers	Start delay	Timer (secs)		
	Preheat	Timer (secs)		
	Crank attempt	Timer (secs)		
	Crank rest	Timer (secs)		
	Safety delay	Timer (secs)		
	Overspeed overshoot	Timer (secs)		
	Warming up	Timer (secs)		
	Return delay	Timer (secs)		
	Cooling run	Timer (secs)		
	E.T.S.(Energise to stop) solenoid hold	Timer (secs)		
	Generator output	Generator Under Voltage L1-N	Trip	
		Generator Under Voltage L1-N	Pre Alarm	
Generator Over Voltage		Pre Alarm		
Generator Over Voltage		Trip		
Generator Under Frequency		Trip		
Generator Under Frequency		Pre Alarm		
Generator Over Frequency		Pre Alarm		
Generator Over Frequency		Trip		
Delayed Overcurrent %		Trip		
Engine speed	Under Speed (RPM)	Trip		
	Under Speed (RPM)	Pre Alarm		
	Over Speed (RPM)	Pre Alarm		
	Over Speed (RPM)	Trip		
DC Voltages	Low DC Voltage	Warning		
	High DC Voltage	Warning		
	Charge Alternator Failure	Warning		

Deep Sea Electronics Plc.  
Highfield House, Hunmanby Industrial Estate,  
North Yorkshire. YO14 0PH. ENGLAND.  
Tel:+44 (0)1723 890099  
Fax: +44 (0)1723 893303.  
Email: sales@deepseapl.com  
Web: www.deepseapl.com  
LO CALL (from UK BT landlines) :  
Telephone 0845 260 8900.

Deep Sea Electronics Inc.  
3230 Williams Avenue, Rockford,  
IL 61101-2668, USA  
Phone: +1 (815) 316-8706  
Fax: +1 (815) 316-8708  
Email: dsesales@deepseausa.com  
Web: www.deepseausa.com  
TOLL FREE (USA only) Tel: 1 866 636 9703

**NOTE:** Full configuration of the 5210 module is possible using the 5200 series configuration software for PC in conjunction with the P810 interface.

