


# Typical Wiring Diagram

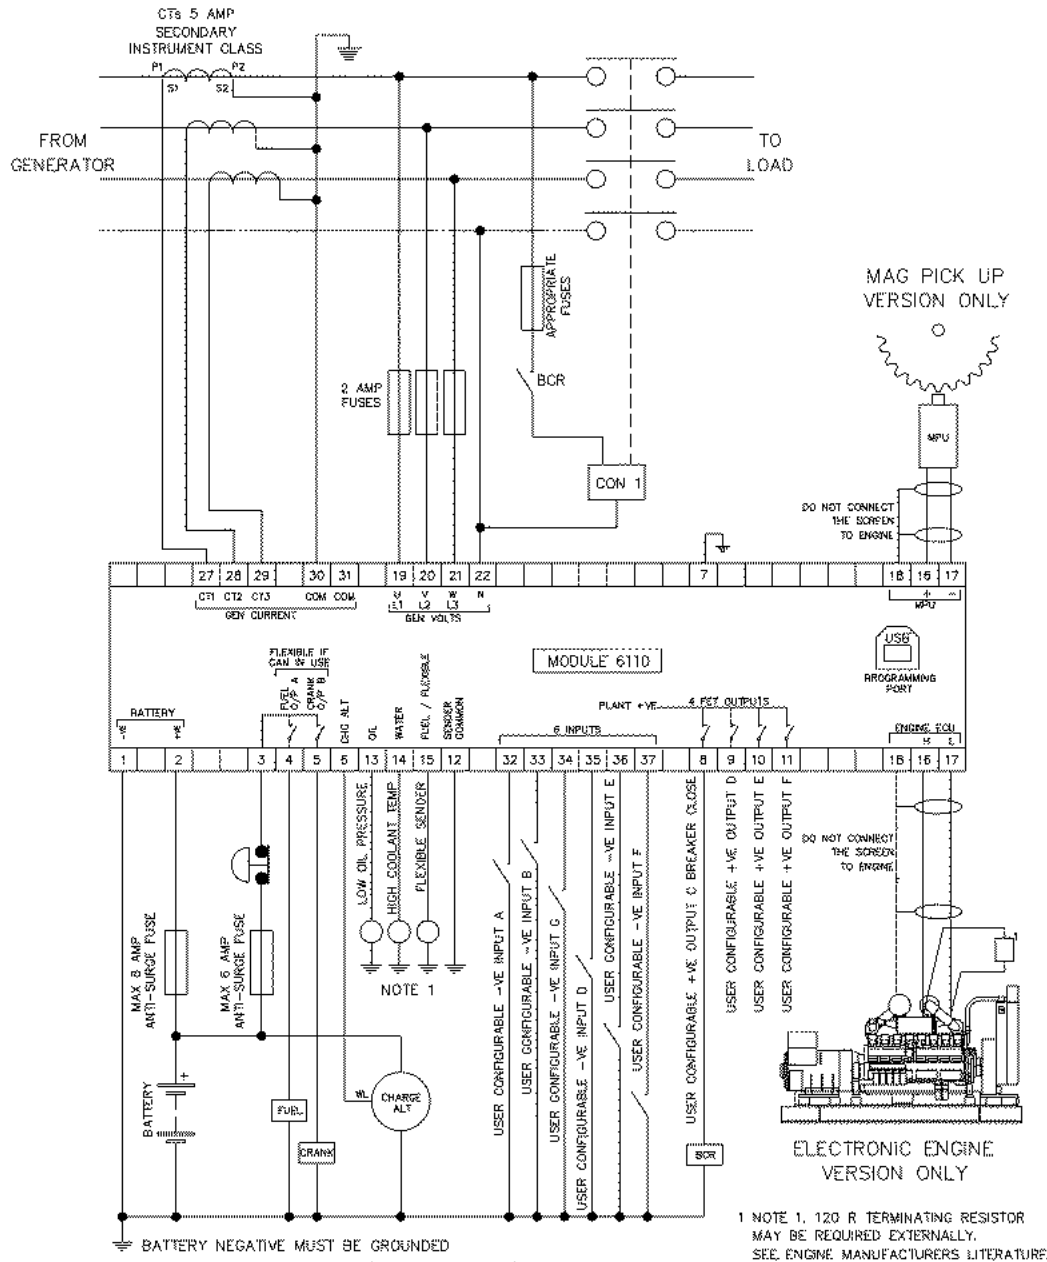

TERMINALS SUITABLE FOR 22-16 AWG (0.6mm - 1.3mm ) FIELD WIRING  
TIGHTENING TORQUE = 0.8Nm (7lb-in)

NOTE 1  
THESE GROUND CONNECTIONS MUST BE ON THE ENGINE BLOCK, AND MUST BE TO THE SENDER BODIES.

1 NOTE 1, 120 R TERMINATING RESISTOR MAY BE REQUIRED EXTERNALLY. SEE ENGINE MANUFACTURERS LITERATURE.

053-059  
ISSUE 1

DEEP SEA ELECTRONICS



## DSE6110 Installation Instructions

### ACCESSING THE FRONT PANEL EDITOR (FPE)

The module must be in STOP mode with the engine at rest before configuration mode can be accessed.

To enter the 'configuration mode' press both the **INFO** **i** and **STOP** **o** buttons together.

### ENTERING THE CONFIGURATION EDITOR PIN NUMBER

If the module PIN number has been set, the PIN number request is then shown. The configuration cannot be viewed or changed until the PIN number is correctly entered.



- The first \* is flashing. Press + or - buttons to adjust it to the correct value for the first digit of the PIN number.
- Press ✓ when the first digit is correctly entered.
- The entered digit will turn back to a \* to maintain security.
- Enter the remaining digits of the pin number using the same method.

If the Configuration PIN has been entered successfully (or the PIN number has not been set in the module) the first configurable parameter is displayed.

**NOTE:-** When ✓ is pressed after editing the final PIN digit, the PIN is checked for validity. If the number is not correct, the editor is automatically exited. To retry you must re-enter the editor as described above.

### EDITING A PARAMETER

Enter the editor as described above.

- Press **▼** to select the required 'page' as detailed below.
- Press **○ (+)** to select the next parameter or **○ (-)** to select the previous parameter within the current page.
- When viewing the parameter to be changed, press the **i (✓)** button. The value begins to flash.
- Press **○ (+)** or **○ (-)** to adjust the value to the required setting.
- Press **i (✓)** the save the current value, the value ceases flashing.
- Press and hold the **i (✓)** button to exit the editor.

**NOTE:-** Values representing pressure will be displayed in Bar. Values representing temperature are displayed in degrees Celsius.

**NOTE:-** To exit the front panel configuration editor at any time, press and hold the **i (✓)** button. Ensure you have saved any changes you have made by pressing the ✓ button first.

**NOTE:-** When the editor is visible, it is automatically exited after 5 minutes of inactivity to ensure security.

**NOTE:-** The PIN number is automatically reset when the editor is exited (manually or automatically) to ensure security.

**Deep Sea Electronics Plc.**  
Tel:+44 (0)1723 890099  
Fax: +44 (0)1723 893303  
LO CALL (from UK BT landlines)  
Telephone 0845 260 8933  
Email: support@deepseapl.com  
Web: www.deepseapl.com

**Deep Sea Electronics inc.**  
Phone: +1 (815) 316-8706  
Fax: +1 (815) 316-8708  
TOLL FREE (USA only) :  
Tel: 1 866 636 9703  
Email: dsesales@deepseausa.com  
Web: www.deepseausa.com

**Deep Sea Electronics Plc.**  
**(Far East)**  
Tel:+66 2 670 6228  
Fax: +66 2 678 3028

Email: support@deepseapl.com  
Web: www.deepseapl.com

## ADJUSTABLE PARAMETERS (Configuration editor)

(Factory default settings are shown in bold italicised text)

Section	Parameter as shown on display	Values	
PIN	Pin Entry	###	
DISPLAY	Contrast	0% - 100% ( <b>53%</b> )	
	Language	<b>English</b> - Others	
	LCD Page Timer	hh:mm:ss ( <b>5m</b> )	
	Auto Scroll Delay	1s - 1hr ( <b>2s</b> )	
ALT CONFIG	Default Config	Default Config	
ENGINE	Oil Pressure Low Shutdown	0bar - 9.97bar ( <b>1.03bar</b> )	
	Coolant Temperature High Shutdown	2°C - 140°C ( <b>95°C</b> )	
	Start Delay Timer	0 - 10hr ( <b>5s</b> )	
	Pre Heat Timer	0 - 5m ( <b>0s</b> )	
	Crank Duration Timer	0 - 1m ( <b>10s</b> )	
	Crank Rest Timer	0 - 1m ( <b>10s</b> )	
	Safety On Delay	0 - 1m ( <b>10s</b> )	
	Smoke Limiting	0 - 15m ( <b>0s</b> )	
	Smoke Limiting Off	0 - 1m ( <b>0s</b> )	
	Warm Up Timer	0 - 1hr ( <b>0s</b> )	
	Cool Down Timer	0 - 1hr ( <b>1m</b> )	
	Speed Low Shutdown	Active, <b>Inactive</b>	
	Speed Low Shutdown	0RPM - 6000RPM ( <b>1270RPM</b> )	
	Speed High Shutdown	0RPM - 6000RPM ( <b>1740RPM</b> )	
	Fail To Stop Delay	0 - 2m ( <b>30s</b> )	
	Battery voltage Low Warning Delay	0 - 24hr ( <b>1m</b> )	
	Battery voltage Low Warning	<b>Active</b> , Inactive	
	Battery Low voltage	0V - 40V ( <b>10V</b> )	
	Battery Voltage High warning	<b>Active</b> , Inactive	
	Battery voltage High warning Delay	0V - 24hr ( <b>1m</b> )	
	Battery voltage High warning	0V - 40V ( <b>30V</b> )	
	Charge Alternator Failure Warning	<b>Active</b> , Inactive	
	Charge Alternator Failure Warning	0V - 39V ( <b>6V</b> )	
	Charge Alternator Failure Warning Delay	0 - 24hr ( <b>5s</b> )	
	Charge Alternator Failure Shutdown	<b>Active</b> , Inactive	
	Charge Alternator Failure Shutdown	0V - 5.9V ( <b>4.0V</b> )	
	Charge Alternator Failure Shutdown Delay	0 - 24hr ( <b>5s</b> )	
	GENERATOR	Voltage Low Shutdown	50V - 360V ( <b>184V</b> )
		Voltage Nominal	50V - 276V ( <b>230V</b> )
		Voltage High Shutdown	231V - 360V ( <b>277V</b> )
		Frequency Low Shutdown	0Hz - 75Hz ( <b>43Hz</b> )
		Frequency Nominal	0Hz - 75Hz ( <b>50Hz</b> )
		Frequency High Shutdown	0Hz - 75Hz ( <b>58Hz</b> )
Full Load Rating		5A - 6000A ( <b>500A</b> )	
Delayed Over Current		<b>Active</b> , Inactive	
Delayed Over Current		50% - 120% ( <b>100%</b> )	
AC System		Single Phase, 2 wire <b>3 Phase, 4 wire</b> 2 Phase, 3 wire (L1 & L3) 3 Phase, 4 wire (Delta) 2 Phase, 3 wire (L1 & L2) 3 Phase, 3 wire	
CT Primary		5A - 6000A ( <b>600A</b> )	
Generator Transient Delay		0 - 10m ( <b>0.7s</b> )	

## Front Panel Configuration Editor

(Factory default settings are shown in bold italicised text)

Section	Parameter as shown on display	Values
TIMERS	LCD Page Timer	hh:mm:ss ( <b>5m</b> )
	Auto Scroll Delay	1s - 1hr ( <b>2s</b> )
	Pre Heat Timer	0 - 5m ( <b>0s</b> )
	Crank Duration Timer	0 - 1m ( <b>10s</b> )
	Crank Rest Timer	0 - 1m ( <b>10s</b> )
	Safety On Delay	0 - 1m ( <b>10s</b> )
	Smoke Limiting	0 - 15m ( <b>0s</b> )
	Smoke Limiting Off	0 - 1m ( <b>0s</b> )
	Warm Up Timer	0 - 1hr ( <b>0s</b> )
	Cool Down Timer	0 - 1hr ( <b>1m</b> )
	Fail To Stop Delay	0 - 2m ( <b>30s</b> )
	Battery voltage Low Warning Delay	0 - 24hr ( <b>1m</b> )
	Battery voltage High warning Delay	0V - 24hr ( <b>1m</b> )
	Return Delay	0 - 5hr ( <b>30s</b> )
	Generator Transient Delay	0.1s - 2m ( <b>30s</b> )

## DIMENSIONS AND MOUNTING

### DIMENSIONS

216mm x 158mm x 42mm  
(8.5" x 6.2" x 1.6")

### PANEL CUTOUT

182mm x 137mm  
(7.2" x 5.4")

### WEIGHT

510g (0.51kg)

### FIXING CLIPS

The module is held into the panel fascia using the supplied fixing clips.

- Withdraw the fixing clip screw (turn anticlockwise) until only the pointed end is protruding from the clip.
- Insert the three 'prongs' of the fixing clip into the slots in the side of the 6000 series module case.
- Pull the fixing clip backwards (towards the back of the module) ensuring all three prongs of the clip are inside their allotted slots.
- Turn the fixing clip screws clockwise until they make contact with the panel fascia.
- Turn the screws a little more to secure the module into the panel fascia. Care should be taken not to over tighten the fixing clip screws.



**NOTE:-** In conditions of excessive vibration, mount the panel on suitable anti-vibration mountings.