


Configuration Parameters – Alternate Configuration (Page 20)				
2001	Default Configuration	On (1), Off (0)	2028 Delayed Over Current Alarm Action	0 (Action)
2002	Enable Configuration	On (1), Off (0)	2029 Over Current Delay	00:00:00
2003	CAN Alternative Engine Speed	On (1), Off (0)	2030 Over Current Trip	0 %
2004	Under Voltage Shutdown Enable	On (1), Off (0)	2031 Generator kW Rating	0 kW
2005	Under Voltage Shutdown Trip	0 v	2032 Overload Protection Enable	On (1), Off (0)
2006	Under Voltage Warning Enable	On (1), Off (0)	2033 Overload Protection Action	0 (Action)
2007	Under Voltage Warning Trip	0 v	2034 Overload Protection Trip	0 %
2008	Loading Voltage	0 v	2035 Overload Protection Trip Delay	0 s
2009	Over Voltage Warning Enable	On (1), Off (0)	2036 AC Syster	0 (AC system)
2010	Over Voltage Warning Return	0 v	2037 Mains Failure Detection	On (1), Off (0)
2011	Over Voltage Warning Trip	0 v	2038 Immediate Mains Dropout	On (1), Off (0)
2012	Over Voltage Trip	0 v	2039 Mains Under Voltage Enable	On (1), Off (0)
2013	Under Frequency Shutdown Enable	On (1), Off (0)	2040 Mains Under Voltage Trip	0 v
2014	Under Frequency Shutdown Trip	0.0 Hz	2041 Mains Under Voltage Return	0 v
2015	Under Frequency Warning Enable	On (1), Off (0)	2042 Mains Over Voltage Enable	On (1), Off (0)
2016	Under Frequency Warning Trip	0.0 Hz	2043 Mains Over Voltage Return	0 v
2017	Loading Frequency	0.0 Hz	2044 Mains Over Voltage Trip	0 v
2018	Nominal Frequency	0.0 Hz	2045 Mains Under Frequency Enable	On (1), Off (0)
2019	Over Frequency Warning Enable	On (1), Off (0)	2046 Mains Under Frequency Trip	0.0 Hz
2020	Over Frequency Warning Return	0.0 Hz	2047 Mains Under Frequency Return	0.0 Hz
2021	Over Frequency Warning Trip	0.0 Hz	2048 Mains Over Frequency Enable	On (1), Off (0)
2022	Over Frequency Shutdown Enable	On (1), Off (0)	2049 Mains Over Frequency Return	0.0 Hz
2023	Over Frequency Shutdown Trip	0.0 Hz	2050 Mains Over Frequency Trip	0.0 Hz
2024	CT Primary	0 A	2051 Under Speed Shutdown Enable	On (1), Off (0)
2025	Full Load Rating	0 A	2052 Under Speed Shutdown Trip	0 RPM
2026	Immediate Over Current	On (1), Off (0)	2053 Over Speed Shutdown Trip	0 RPM
2027	Delayed Over Current Alarm	On (1), Off (0)		

Output Sources		
0	Not Used	33 Fuel Relay
1	Air Flap Relay	34 Gas Choke On
2	Audible Alarm	35 Gas Ignitor
3	Battery Over Volts Warning	36 Generator Available
4	Battery Under Volts Warning	37 Generator Over Voltage Shutdown
5	CAN ECU Data Fail	38 Generator Under Voltage Shutdown
6	CAN ECU Error	39 kW Overload Alarm
7	CAN ECU Fail	40 Over Current Immediate Warning
8	CAN ECU Power	41 Delayed Over Current Trip Alarm
9	CAN ECU Stop	42 High Coolant Temperature Shutdown
10	Charge Alternator Shutdown	43 Low Oil Pressure Shutdown
11	Charge Alternator Warning	44 Mains High Frequency
12	Close Gen Output	45 Mains High Voltage
13	Close Gen Output Pulse	46 Mains Low Frequency
14	Close Mains Output	47 Mains Low Voltage
15	Close Mains Output Pulse	48 Oil Pressure Sender Open Circuit
16	Combined Mains Failure	49 Open Gen Output
17	Common Alarm	50 Open Gen Output Pulse
18	Common Electrical Trip	51 Open Mains Output
19	Common Shutdown	52 Open Mains Output Pulse
20	Common Warning	53 Over Frequency Shutdown
21	Cooling Down	54 Over Speed Shutdown
22	Digital Input A	55 Preheat During Preheat Timer
23	Digital Input B	56 Preheat Until End Of Crank
24	Digital Input C	57 Preheat Until End Of Safety Timer
25	Digital Input D	58 Preheat Until End Of Warning
26	RESERVED	59 Smoke Limiting
27	RESERVED	60 Start Relay
28	RESERVED	61 Temperature Sender Open Circuit
29	Emergency Stop	62 Under Frequency Shutdown
30	Emergency To Stop	63 Under Speed Shutdown
31	Fail To Start	64 Waiting For Manual Restore
32	Fail To Stop	65 Flexible Sender C High Alarm
33	Fuel Relay	66 Flexible Sender C High Alarm
34	Gas Choke On	67 Flexible Sender C Low Pre-Alarm
35	Gas Ignitor	68 Flexible Sender C Low Alarm
36	Generator Available	69 RESERVED
37	Generator Over Voltage Shutdown	70 RESERVED
38	Generator Under Voltage Shutdown	71 RESERVED
39	kW Overload Alarm	72 RESERVED
40	Over Current Immediate Warning	73 Fuel Sender High Alarm
41	Delayed Over Current Trip Alarm	74 Fuel Sender High Alarm
42	High Coolant Temperature Shutdown	75 Fuel Sender Low Pre-Alarm
43	Low Oil Pressure Shutdown	76 Fuel Sender Low Alarm
44	Mains High Frequency	77 Delayed Load Output 1
45	Mains High Voltage	78 Delayed Load Output 2
46	Mains Low Frequency	79 Delayed Load Output 3
47	Mains Low Voltage	80 Delayed Load Output 4
48	Oil Pressure Sender Open Circuit	81 Air Filter Maintenance Output
49	Open Gen Output	82 Oil Filter Maintenance Output
50	Open Gen Output Pulse	83 Fuel Filter Maintenance Output
51	Open Mains Output	84 System In Stop Mode
52	Open Mains Output Pulse	85 System In Auto Mode
53	Over Frequency Shutdown	86 System In Manual Mode
54	Over Speed Shutdown	87 RESERVED
55	Preheat During Preheat Timer	88 Analogue Input A (Digital)
56	Preheat Until End Of Crank	89 Analogue Input B (Digital)
57	Preheat Until End Of Safety Timer	90 Analogue Input C (Digital)
58	Preheat Until End Of Warning	91 RESERVED
59	Smoke Limiting	92 RESERVED
60	Start Relay	93 RESERVED
61	Temperature Sender Open Circuit	94 RESERVED
62	Under Frequency Shutdown	95 Over Speed Overshoot
63	Under Speed Shutdown	96 Over Frequency Overshoot
64	Waiting For Manual Restore	97 Display Heater Fitted and Active
65	Flexible Sender C High Alarm	

Input Sources		
0	User Configured	9 External Panel Lock
1	Alarm Mute	10 Generator Auto Inhibit
2	Alarm Reset	11 Lamp Test
3	Alternative Configurator	12 Low Fuel Level Switch
4	Auto Restore Inhibit	13 Mains Load Inhibit
5	Auto Start Inhibit	14 Oil Pressure Switch
6	Auxiliary Mains Fail	15 Remote Start Off Load
7	Coolant Temperature Switch	16 Remote Start On Load
8	Emergency Stop	17 Simulate Mains Available
9	External Panel Lock	18 Simulate Stop Button
10	Generator Auto Inhibit	19 Simulate Auto Button
11	Lamp Test	20 Simulate Start Button
12	Low Fuel Level Switch	21 Smoke Limiting
13	Mains Load Inhibit	22 Close Generator Open Mains
14	Oil Pressure Switch	23 Close Mains Open Generator
15	Remote Start Off Load	24 Maintenance Reset Oil
16	Remote Start On Load	25 Maintenance Reset Air
17	Simulate Mains Available	26 Maintenance Reset Fuel

## TYPICAL WIRING DIAGRAM

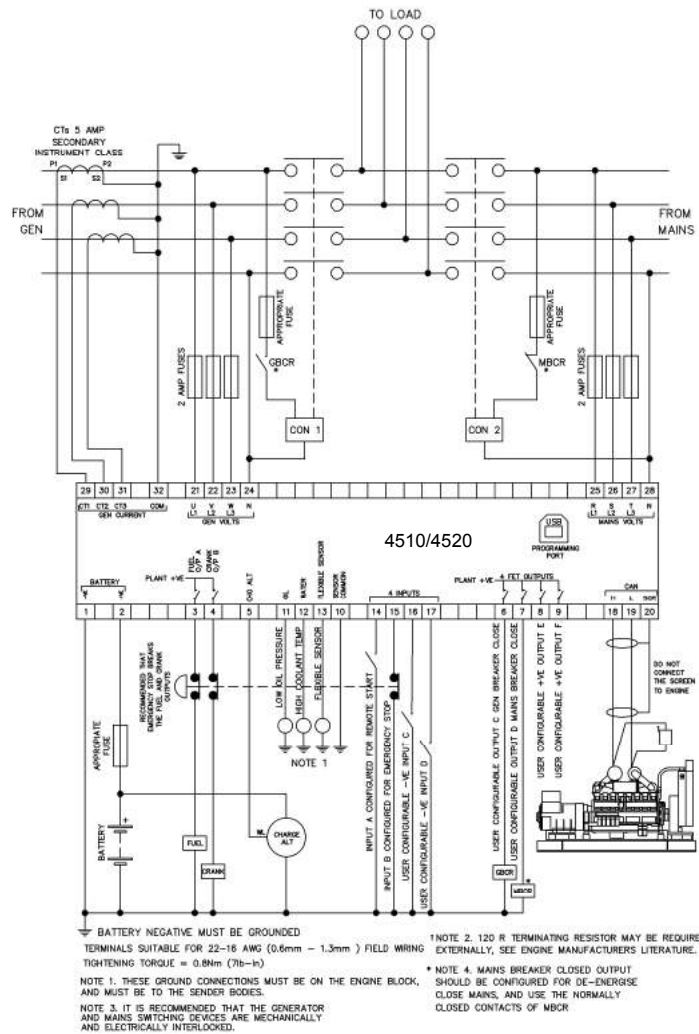

**NOTE:** A larger version of the typical wiring diagram is included in the products operator manual. Refer to DSE Publication: **057-171 DSE4510 & DSE4520 Operators Manual**

## REQUIREMENTS FOR UL CERTIFICATION

Specification	Description
Screw Terminal Tightening Torque	• 4.5 lb-in (0.5 Nm)
Conductors	• Terminals suitable for connection of conductor size 12 AWG – 26 AWG (0.5 mm <sup>2</sup> to 2.0 mm <sup>2</sup> ). • Conductor protection must be provided in accordance with NFPA 70, Article 240 • Low voltage circuits (35 V or less) must be supplied from the engine starting battery or an isolated secondary circuit. • The communication, sensor, and/or battery derived circuit conductors shall be separated and secured to maintain at least 1/4" (6 mm) separation from the generator and mains connected circuit conductors unless all conductors are rated 600 V or greater.
Current Inputs	• Must be connected through UL Listed or Recognized isolating current transformers with the secondary rating of 5 A max.
Communication Circuits	• Must be connected to communication circuits of UL Listed equipment
DC Output Pilot Duty	• 0.5 A
Mounting	• Suitable for use in type 1 Enclosure Type rating with surrounding air temperature -22 °F to +158 °F (-30 °C to +70 °C) • Suitable for pollution degree 3 environments when voltage sensing inputs do not exceed 300 V. When used to monitor voltages over 300 V device to be install in an unventilated or filtered ventilation enclosure to maintain a pollution degree 2 environment.
Operating Temperature	• -22 °F to +158 °F (-30 °C to +70 °C)
Storage Temperature	• -40 °F to +176 °F (-40 °C to +80 °C)

**DEEP SEA ELECTRONICS PLC**  
**DSE4510 & DSE4520 Installation Instructions**  
 Applicable to module version 1.4.46 and upwards.

## EDITING A PARAMETER

- Press the **EDIT** (-) and **ENTER** (✓) buttons together to enter the editor mode.
- Press the **UP** (↑) or **DOWN** (↓) navigation buttons to cycle through the front panel editor in increments of 100.
- Press the **LEFT** (←) or **RIGHT** (→) navigation buttons to cycle through the front panel editor in increments of 1.
- When viewing the parameter to be edited, press the (✓) button and the value begins to flash.
- Press the **LEFT** (←) or **RIGHT** (→) navigation buttons to adjust the value to the required setting.
- Press the **EDIT** (✓) button the save the current value, the value ceases flashing.
- Press and hold the **EDIT** (✓) button to save and exit the editor, the configuration icon is removed from the display.

**NOTE:** Pressing and holding the **LEFT** (←) or **RIGHT** (→) buttons will give auto-repeat functionality. Values can be changed quickly by holding the navigation buttons for a prolonged period of time.

DIMENSIONS	PANEL CUTOUT	TERMINALS
140 mm x 113 mm x 43 mm (5.5" x 4.4" x 1.7")	118 mm x 92 mm (4.6" x 3.6")	Tightening Torque: 0.5 Nrr (4.5 lb-in) Conductor Size: 0.5 mm <sup>2</sup> to 2.5 mm <sup>2</sup> (AWG 24 to AWG 10)

**NOTE:** Terminals 8, 9, 25, 26, 27 & 28 are not fitted to DSE4510

**NOTE:** Terminals 29, 30, 31 & 32 are fitted to DSE4510 & DSE4520 current sensing variants only

**Deep Sea Electronics PLC**  
 Tel: +44 (0)1723 890099  
 Fax: +44 (0)1723 893303  
 Email: sales@deepseapl.com  
 Web: www.deepseapl.com

**Deep Sea Electronics Inc**  
 Tel: +1 (815) 316-8706  
 Fax: +1 (815) 316-8708  
 Email: sales@deepseausa.com  
 Web: www.deepseausa.com

101	Contrast	0 (%)	117	Use Module RPM	On (1), Off (0)
102	Fast Loading Enabled	On (1), Off (0)	118	Use Module Charge Alt	On (1), Off (0)
103	All Warnings Latched	On (1), Off (0)	119	Disable CAN Speed Control	On (1), Off (0)
104	Lamp Test At Startup	On (1), Off (0)	120	CT Position	Gen (0), Load (1)
105	Power Save Mode Enable	On (1), Off (0)	121	Generator Voltage Display	On (1), Off (0)
106	Deep Sleep Mode Enable	On (1), Off (0)	122	Mains Voltage Display	On (1), Off (0)
107	Protected Start Enable	On (1), Off (0)	123	Generator Frequency Display	On (1), Off (0)
108	Event Log Display Format	On (1), Off (0)	124	Mains Frequency Display	On (1), Off (0)
109	Power Up Mode	0 (Power Up Mode)	125	Current Display	On (1), Off (0)
110	DTC String Enable	On (1), Off (0)	126	kW Display	On (1), Off (0)
111	RESERVED		127	kVAr Display	On (1), Off (0)
112	Pin Protected Maintenance Reset	On (1), Off (0)	128	kVA Display	On (1), Off (0)
113	Stop Button Coodown	On (1), Off (0)	129	pf Display	On (1), Off (0)
114	Use Module Oil Pressure	On (1), Off (0)	130	kWh Display	On (1), Off (0)
115	Use Module Coolant Temp	On (1), Off (0)	131	kVArh Display	On (1), Off (0)
116	Use Module Engine Hours	On (1), Off (0)	132	kVAh Display	On (1), Off (0)

201	CAN Alternative Engine Speed	On (1), Off (0)	203	CAN ECU Data Fail Action	0 (Action)
202	CAN ECU Data Fail Enable	On (1), Off (0)	204	CAN ECU Data Fail Delay	0 s

301	Digital Input A Source	0 (Input Source)
302	Digital Input A Polarity	0 (Polarity)
303	Digital Input A Action (If Source = User Config)	0 (Action)
304	Digital Input A Arming (If Source = User Config)	0 (Arming)
305	Digital Input A Activation Delay (If Source = User Config)	0 s
306	Digital Input B Source	0 (Input Source)
307	Digital Input B Polarity	0 (Polarity)
308	Digital Input B Action (If Source = User Config)	0 (Action)
309	Digital Input B Arming (If Source = User Config)	0 (Arming)
310	Digital Input B Activation Delay (If Source = User Config)	0 s
311	Digital Input C Source	0 (Input Source)
312	Digital Input C Polarity	0 (Polarity)
313	Digital Input C Action (If Source = User Config)	0 (Action)
314	Digital Input C Arming (If Source = User Config)	0 (Arming)
315	Digital Input C Activation Delay (If Source = User Config)	0 s
316	Digital Input D Source	0 (Input Source)
317	Digital Input D Polarity	0 (Polarity)
318	Digital Input D Action (If Source = User Config)	0 (Action)
319	Digital Input D Arming (If Source = User Config)	0 (Arming)
320	Digital Input D Activation Delay (If Source = User Config)	0 s
321-330	RESERVED	

331	Analogue Input A (Set As Digital) Source	0 (Input Source)
332	Analogue Input A (Set As Digital) Polarity	0 (Polarity)
333	Analogue Input A (Set As Digital) Action (If Source = User Config)	0 (Action)
334	Analogue Input A (Set As Digital) Arming (If Source = User Config)	0 (Arming)
335	Analogue Input A (Set As Digital) Activation Delay (If Source = User Config)	0 s
336	Analogue Input B (Set As Digital) Source	0 (Input Source)
337	Analogue Input B (Set As Digital) Polarity	0 (Polarity)
338	Analogue Input B (Set As Digital) Action (If Source = User Config)	0 (Action)
339	Analogue Input B (Set As Digital) Arming (If Source = User Config)	0 (Arming)
340	Analogue Input B (Set As Digital) Activation Delay (If Source = User Config)	0 s
341	Analogue Input C (Set As Digital) Source	0 (Input Source)
342	Analogue Input C (Set As Digital) Polarity	0 (Polarity)
343	Analogue Input C (Set As Digital) Action (If Source = User Config)	0 (Action)
344	Analogue Input C (Set As Digital) Arming (If Source = User Config)	0 (Arming)
345	Analogue Input C (Set As Digital) Activation Delay (If Source = User Config)	0 s

401	Digital Output A Source	0 (Output Source)	407	Digital Output D Source	0 (Output Source)
402	Digital Output A Polarity	0 (Output Polarity)	408	Digital Output D Polarity	0 (Output Polarity)
403	Digital Output B Source	0 (Output Source)	409	Digital Output E Source	0 (Output Source)
404	Digital Output B Polarity	0 (Output Polarity)	410	Digital Output E Polarity	0 (Output Polarity)
405	Digital Output C Source	0 (Output Source)	411	Digital Output F Source	0 (Output Source)
406	Digital Output C Polarity	0 (Output Polarity)	412	Digital Output F Polarity	0 (Output Polarity)

Pressure Sensor List		Temperature Sensor List		Percentage Sensor List	
Index	Type	Index	Type	Index	Type
0	Not used	0	Not Used	0	Not Used
1	Dig Closed for Alarm	1	Dig Closed for Alarm	1	Dig Closed for Alarm
2	Dig Open for Alarm	2	Dig Open for Alarm	2	Dig Open for Alarm
3	VDO 5 Bar	3	VDO 120 °C	3	VDO Ohm (10-180)
4	VDO 10 Bar	4	Datcon High	4	VDO Tube (90-0)
5	Datcon 5 Bar	5	Datcon Low	5	US Ohm (240-33)
6	Datcon 10 Bar	6	Murphy	6	GM Ohm (0-90)
7	Datcon 7 Bar	7	Cummins	7	GM Ohm (0-30)
8	Murphy 7 Bar	8	PT100	8	Ford (73-10)
9	CMB812	9	Veglia	9	User Defined
10	Veglia	10	Beru		
11	User Defined	11	User Defined		

501	Mains Transient Delay	510	Return Delay	519	Delayed Load Output 2
502	Start Delay	511	Cooling Time	520	Delayed Load Output 3
503	Preheat Timer	512	ETS Solenoid Hold	521	Delayed Load Output 4
504	Crank Time	513	Failed To Stop Delay	522	Power Save Mode Delay
505	Crank Rest Time	514	Generator Transient Delay	523	Deep Sleep Mode Delay
506	Smoke Limiting	515	Transfer Time	524	Page Timer
507	Smoke Limiting Off	516	Breaker Trip Pulse	525	Cooling Time at Idle
508	Safety On Delay	517	Breaker Close Pulse		
509	Warm Up Time	518	Delayed Load Output 1		

601	Alternator Fitted	On (1), Off (0)	620	Over Frequency Warning Enable	On (1), Off (0)
602	Alternator Poles	0	621	Over Frequency Warning Return	0 (Hz)
603	Under Voltage Shutdown Enable	On (1), Off (0)	622	Over Frequency Warning Trip	0 (Hz)
604	Under Voltage Trip Shutdown	0 (V)	623	Over Frequency Shutdown Enable	On (1), Off (0)
605	Under Voltage Warning Enable	On (1), Off (0)	624	Over Frequency Shutdown Trip	0 (Hz)
606	Under Voltage Warning Trip	0 (V)	625	AC System	0 (AC System)
607	RESERVED		626	CT Primary	0 (A)
608	Loading Voltage	0 (V)	627	Full Load Rating	0 (A)
609	Over Voltage Warning Enable	On (1), Off (0)	628	Immediate Over Current Enable	On (1), Off (0)
610	Over Voltage Warning Return	0 (V)	629	Delayed Over Current Alarm Enable	On (1), Off (0)
611	Over Voltage Warning Trip	0 (V)	630	Delayed Over Current Alarm Action	0 (Action)
612	Over Voltage Shutdown Trip	0 (V)	631	Over Current Delay Time	0 (s)
613	Under Frequency Shutdown Enable	On (1), Off (0)	632	Over Current Trip	0 (%)
614	Under Frequency Shutdown Trip	0.0 (Hz)	633	kW Rating	0 (kW)
615	Under Frequency Warning Enable	On (1), Off (0)	634	Over kW Protection Enable	On (1), Off (0)
616	Under Frequency Warning Trip	0.0 (Hz)	635	Over kW Protection Action	0 (Action)
617	RESERVED		636	Over kW Protection Trip	0 (%)
618	Loading Frequency	0.0 (Hz)	637	Over kW Protection Trip Delay	0 (s)
619	Nominal Frequency	0.0 (Hz)	638*	Enable CT Support	On (1), Off (0)

701	AC System	0 (AC System)	709	Over Voltage Level Trip	0 (V)
702	Mains Failure Detection	On (1), Off (0)	710	Under Frequency Enable	On (1), Off (0)
703	Immediate Mains Dropout	On (1), Off (0)	711	Under Frequency Trip	0.0 (Hz)
704	Under Voltage Enable	On (1), Off (0)	712	Under Frequency Return	0.0 (Hz)
705	Under Voltage Level	0 (V)	713	Over Frequency Enable	On (1), Off (0)
706	Under Voltage Return	0 (V)	714	Over Frequency Return	0 (Hz)
707	Over Voltage Enable	On (1), Off (0)	715	Over Frequency Trip	0.0 (Hz)
708	Over Voltage Return	0 (V)			

801	Start Attempts	0	817	Low Battery Voltage Return	0 (0 V)
802	Over Speed Overshoot	0 (%)	818	Low Battery Voltage Delay	0:00:00
803	Over Speed Delay	0 (s)	819	High Battery Voltage Enable	On (1), Off (0)
804	Gas Choke Timer (Gas Engine Only)	0 (s)	820	High Battery Voltage Return	0 (0 V)
805	Gas On Delay (Gas Engine Only)	0 (s)	821	High Battery Voltage Trip	0 (0 V)
806	Gas Ignition Off Delay (Gas Engine Only)	0 (s)	822	High Battery Voltage Warning Delay	0 (s)
807	Crank Disconnect On Oil Pressure Enable	On (1), Off (0)	823	Charge Alt Shutdown Enable	On (1), Off (0)
808	Check Oil Pressure Prior To Starting	On (1), Off (0)	824	Charge Alt Shutdown Trip	0 (0 V)
809	Crank Disconnect On Oil	0.00 (Bar)	825	Charge Alt Shutdown Delay	0 (s)
810	Crank Disconnect On Frequency	0.0 (Hz)	826	Charge Alt Warning Enable	On (1), Off (0)
811	Crank Disconnect On Engine Speed	0 (RPM)	827	Charge Alt Warning Trip	0 (0 V)
812	Under Speed Enable	On (1), Off (0)	828	Charge Alt Warning Delay	0 (s)
813	Under Speed Trip	0 (RPM)	829	Low Battery Start Arming	On (1), Off (0)
814	Over Speed Trip	0 (RPM)	830	Low Battery Start Threshold	0 (0 V)
815	Low Battery Voltage Enable	On (1), Off (0)	831	Low Battery Start Delay	0 (s)
816	Low Battery Voltage Trip	0 (0 V)	832	Low Battery Start Run Time	0 (s)

Index	Type	Index	Type	Index	Arming	Index	Mode
0	None	0	2 Phase 3 Wire (L1-L2)	0	Always	0	Stop
1	Digital Input	1	2 Phase 3 Wire (L1-L3)	1	From Safety On	1	Manual
2	Percentage Sensor	2	3 Phase 3 Wire	2	From Starting	2	Auto
3	Pressure Sensor	3	3 Phase 4 Wire	3	Never		
4	Temperature Sensor	4	3 Phase 4 Wire (Delta)				
		5	Single Phase 2 Wire				

Index	Polarity	Index	Polarity	Index	Action
0	Close to Activate	0	Energise	0	Electrical Trip
1	Open to Activate	1	De-Energise	1	Shutdown
				2	Warning

901	Analogue Input A Sensor Type	0 (Sensor Type)
902	Analogue Input A Sensor Selection	0 (Pressure Sensor List)
903	Low Oil Pressure Enable	On (1), Off (0)
904	Low Oil Pressure Trip	0 (Bar)
905	Oil Pressure Sender Open Circuit	On (1), Off (0)
906	Analogue Input B Sensor Type	0 (Sensor Type)
907	Analogue Input B Sensor Selection	0 (Temperature Sensor List)
908	High Engine Temperature Trip	0.00 (°C)
909	Temperature Sender Open Circuit	On (1), Off (0)
910	Analogue Input C Sensor Usage	Flexible Sensor (1), Fuel Level Sensor (0)
911	Analogue Input C Sensor Type	0 (Sensor Type)
912	Analogue Input C Sensor Selection	0 (Pressure / Temperature / Percentage Sensor List)
913	Flexible Sensor C Arming	0 (Arming)
914	Flexible Sensor C Low Alarm Action	0 (Action)
915	Flexible Sensor C Low Alarm Trip	0 (%) / Bar / °C
916	RESERVED	
917	Flexible Sensor C Low Pre-Alarm Enable	On (1), Off (0)
918	Flexible Sensor C Low Pre-Alarm Trip	0 (%) / Bar / °C
919	Flexible Sensor C Low Pre-Alarm Return	0 (%) / Bar / °C
920	RESERVED	
921	Flexible Sensor C High Pre-Alarm Enable	On (1), Off (0)
922	Flexible Sensor C High Pre-Alarm Return	0 (%) / Bar / °C
923	Flexible Sensor C High Pre-Alarm Trip	0 (%) / Bar / °C
924-925	RESERVED	
926	Flexible Sensor C High Alarm Action	0 (Action)
927	Flexible Sensor C High Alarm Trip	0 (%) / Bar / °C
928-929	RESERVED	
930	Fuel Sensor C Low Shutdown Enable	On (1), Off (0)
931	Fuel Sensor C Low Shutdown Trip	0 (%)
932	Fuel Sensor C Low Shutdown Delay	0 (s)
933	Fuel Sensor C Low Pre-Alarm Enable	On (1), Off (0)
934	Fuel Sensor C Low Pre-Alarm Trip	0 (%)
935	Fuel Sensor C Low Pre-Alarm Return	0 (%)
936	Fuel Sensor C Low Pre-Alarm Delay	0 (s)
937	Fuel Sensor C High Pre-Alarm Enable	On (1), Off (0)
938	Fuel Sensor C High Pre-Alarm Return	0 (%)
939	Fuel Sensor C High Pre-Alarm Trip	0 (%)
940	Fuel Sensor C High Pre-Alarm Delay	0 (s)
941	RESERVED	
942	Fuel Sensor C High Alarm Action	0 (Action)
943	Fuel Sensor C High Alarm Trip	0 (%)
944	Fuel Sensor C High Alarm Delay	0 (s)

1001	Enable Scheduler	On (1), Off (0)
1002	Schedule Run On or Off Load	On (1), Off (0)
1003	Scheduler Period	Weekly(0), Monthly(1)
1004, 1008, 1012, 1016, 1020, 1024, 1028, 1032	Start Time (Entry 1-8)	0:00:00
1005, 1009, 1013, 1017, 1021, 1025, 1029, 1033	Day (Entry 1-8)	0 (1=Monday)
1006, 1010, 1014, 1018, 1022, 1026, 1030, 1034	Week (Entry 1-8)	1, 2, 3 or 4
1007, 1011, 1015, 1019, 1023, 1027, 1031, 1035	Duration (Entry 1-8)	0 (s)

1101	Time of Day	0:00:00	1104	Day of Month	1-31
1102	Day of Week	0 (1=Monday)	1105	Month of Year	1-12
1103	Week of Year	1-52	1106	Year	0-99

1201	Oil Maintenance Alarm Enable	On (1), Off (0)	1206	Air Maintenance Alarm Engine Hours	0 (h)
1202	Oil Maintenance Alarm Action	0 (Action)	1207	Fuel Maintenance Alarm Enable	On (1), Off (0)
1203	Oil Maintenance Alarm Engine Hours	0 (h)	1208	Fuel Maintenance Alarm Action	0 (Action)
1204	Air Maintenance Alarm Enable	On (1), Off (0)	1209	Fuel Maintenance Alarm Engine Hours	0 (h)
1205	Air Maintenance Alarm Action	0 (Action)			

x	Functionality in all DSE4510 & DSE4520 variants.
x	Functionality in all DSE4520 variants.
x	Functionality in DSE4510 & DSE4520 current sensing variants only
x	Functionality in DSE4510 & DSE4520 RT & RTH variants only.
*	Functionality in DSE4510 & DSE4520 RT & RTH variants only with version 1.6.71 and later.