

Configuration Parameters – Scheduler (Page 10)		
1001	Enable Scheduler	On (1), Off (0)
1002	Schedule Run On or Off Load	On (1), Off (0)
1003 Scheduler Period Weekly(0), Monthly(1)		
1004, 1008, 1012, 1016, 1020, 1024, 1028, 1032	Start Time (Entry 1-8)	0:00:00
1005, 1009, 1013, 1017, 1021, 1025, 1029, 1033	Day (Entry 1-8)	0 (1=Monday)
1006, 1010, 1014, 1018, 1022, 1026, 1030, 1034	Week (Entry 1-8)	1, 2, 3 or 4
1007, 1011, 1015, 1019, 1023, 1027, 1031, 1035	Duration (Entry 1-8)	0 s

Configuration Parameters – Time (Page 11)					
1101	Time of Day	0:00:00	1104	Day of Month	1-31
1102	Day of Week	0 (1=Monday)	1105	Month of Year	1-12
1103	Week of Year	1-52	1106	Year	0-99

Configuration Parameters – Maintenance Alarms (Page 12)					
1201	Oil Maintenance Alarm Enable	On (1), Off (0)	1206	Air Maintenance Alarm Engine Hours	0 h
1202	Oil Maintenance Alarm Action	0 (Action)	1207	Fuel Maintenance Alarm Enable	On (1), Off (0)
1203	Oil Maintenance Alarm Engine Hours	0 h	1208	Fuel Maintenance Alarm Action	0 (Action)
1204	Air Maintenance Alarm Enable	On (1), Off (0)	1209	Fuel Maintenance Alarm Engine Hours	0 h
1205	Air Maintenance Alarm Action	0 (Action)			

Configuration Parameters – Alternate Configuration (Page 20)
 For information on this section, refer to DSE Publication: 057-218 DSE6010 MKII & DSE6020 MKII Operators Manual


Output Sources			
0	Not Used	34	Gas Choke On
1	Air Flap Relay	35	Gas Ignition
2	Audible Alarm	36	Generator Available
3	Battery Over Volts Warning	37	Generator Over Voltage Shutdown
4	Battery Under Volts Warning	38	Generator Under Voltage Shutdown
5	CAN ECU Data Fail	39	kW Overload Alarm
6	CAN ECU Error	40	Over Current Immediate Warning
7	CAN ECU Fail	41	Delayed Over Current Trip Alarm
8	CAN ECU Power	42	High Coolant Temperature Shutdown
9	CAN ECU Stop	43	Low Oil Pressure Shutdown
10	Charge Alternator Shutdown	44	Mains High Frequency
11	Charge Alternator Warning	45	Mains High Voltage
12	Close Gen Output	46	Mains Low Frequency
13	Close Gen Output Pulse	47	Mains Low Voltage
14	Close Mains Output	48	Oil Pressure Sender Open Circuit
15	Close Mains Output Pulse	49	Open Gen Output
16	Combined Mains Failure	50	Open Gen Output Pulse
17	Common Alarm	51	Open Mains Output
18	Common Electrical Trip	52	Open Mains Output Pulse
19	Common Shutdown	53	Gen Over Frequency Shutdown
20	Common Warning	54	Over Speed Shutdown
21	Cooling Down	55	Preheat During Preheat Timer
22	Digital Input A	56	Preheat Until End Of Crank
23	Digital Input B	57	Preheat Until End Of Safety Timer
24	Digital Input C	58	Preheat Until End Of Warning
25	Digital Input D	59	Smoke Limiting
26	Digital Input E	60	Start Relay
27	Digital Input F	61	Temperature Sender Open Circuit
28	RESERVED	62	Under Frequency Shutdown
29	Emergency Stop	63	Under Speed Shutdown
30	Emergency To Stop	64	Flexible Sender A High Alarm
31	Fail To Start	65	Flexible Sender A High Alarm
32	Fail To Stop	66	Flexible Sender A Low Pre-Alarm
33	Fuel Relay	67	Flexible Sender A Low Alarm
34	Gas Choke On	68	Waiting For Manual Restore
35	Gas Ignition	69	Flexible Sender C High Alarm
36	Generator Available	70	Flexible Sender C High Alarm
37	Generator Over Voltage Shutdown	71	Flexible Sender C Low Pre-Alarm
38	Generator Under Voltage Shutdown	72	Flexible Sender C Low Alarm
39	kW Overload Alarm	73	Flexible Sender D High Alarm
40	Over Current Immediate Warning	74	Flexible Sender D High Alarm
41	Delayed Over Current Trip Alarm	75	Flexible Sender D Low Pre-Alarm
42	High Coolant Temperature Shutdown	76	Flexible Sender D Low Alarm
43	Low Oil Pressure Shutdown	77	Fuel Sender High Alarm
44	Mains High Frequency	78	Fuel Sender High Alarm
45	Mains High Voltage	79	Fuel Sender Low Pre-Alarm
46	Mains Low Frequency	80	Fuel Sender Low Alarm
47	Mains Low Voltage	81	Delayed Load Output 1
48	Oil Pressure Sender Open Circuit	82	Delayed Load Output 2
49	Open Gen Output	83	Delayed Load Output 3
50	Open Gen Output Pulse	84	Delayed Load Output 4
51	Open Mains Output	85	Air Filter Maintenance Output
52	Open Mains Output Pulse	86	Oil Filter Maintenance Output
53	Gen Over Frequency Shutdown	87	Fuel Filter Maintenance Output
54	Over Speed Shutdown	88	System In Stop Mode
55	Preheat During Preheat Timer	89	System In Auto Mode
56	Preheat Until End Of Crank	90	System In Manual Mode
57	Preheat Until End Of Safety Timer	91	Fuel Pump Control
58	Preheat Until End Of Warning	92	Analogue Input A (Digital)
59	Smoke Limiting	93	Analogue Input B (Digital)
60	Start Relay	94	Analogue Input C (Digital)
61	Temperature Sender Open Circuit	95	Analogue Input D (Digital)
62	Under Frequency Shutdown	96	System In Test Mode
63	Under Speed Shutdown	97	Loss Of MPU Signal
64	Flexible Sender A High Alarm	98	MPU Open Circuit
65	Flexible Sender A High Alarm	99	Over Speed Overshoot
66	Flexible Sender A Low Pre-Alarm	100	Over Frequency Overshoot
67	Flexible Sender A Low Alarm	101	Display Heater Fitted and Active

Input Sources			
0	User Configured	10	Generator Load Inhibit
1	Alarm Mute	11	Lamp Test
2	Alarm Reset	12	Low Fuel Level Switch
3	Alternative Configuration	13	Mains Load Inhibit
4	Auto Restore Inhibit	14	Oil Pressure Switch
5	Auto Start Inhibit	15	Remote Start Off Load
6	Auxiliary Mains Fail	16	Remote Start On Load
7	Coolant Temperature Switch	17	Simulate Mains Available
8	RESERVED	18	Simulate Stop Button
9	External Panel Lock	19	Simulate Auto Button
20	Simulate Start Button	21	Smoke Limiting
21	Smoke Limiting	22	Close Generator Open Mains
22	Close Generator Open Mains	23	Close To Mains Open Generator
23	Close To Mains Open Generator	24	Maintenance Reset Oil
24	Maintenance Reset Oil	25	Maintenance Reset Air
25	Maintenance Reset Air	26	Maintenance Reset Fuel
26	Maintenance Reset Fuel	27	Simulate Manual Button
27	Simulate Manual Button	28	Simulate Test Button
28	Simulate Test Button	29	Manual Mode And Start Request

Digital Input Polarity		Output Polarity		Alarm Action		Fuel Sensor Units	
Index	Polarity	Index	Polarity	Index	Action	Index	Units
0	Close to Activate	0	Energise	0	Electrical Trip	0	Litres
1	Open to Activate	1	De-Energise	1	Shutdown	1	Imperial Gallons
				2	Warning	2	US Gallons

Functionality in DSE6010 and DSE6020 MKII
 Functionality in DSE6020 MKII only

TYPICAL WIRING DIAGRAM

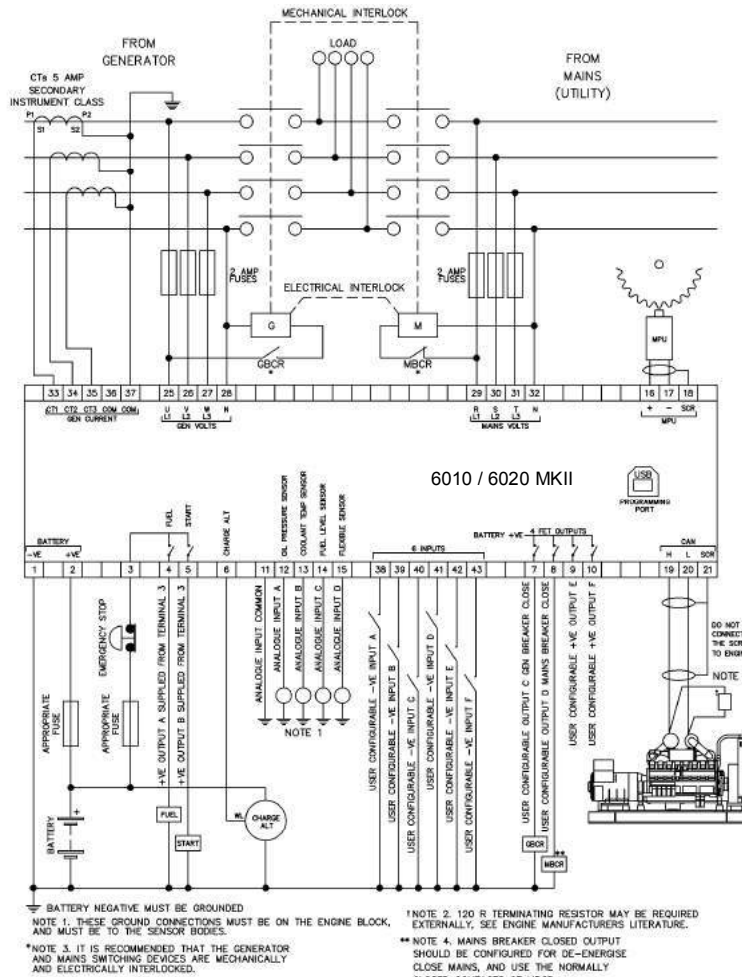

NOTE 1: THESE GROUND CONNECTIONS MUST BE ON THE ENGINE BLOCK, AND MUST BE TO THE SENSOR BODIES.
 NOTE 2: 120 R TERMINATING RESISTOR MAY BE REQUIRED EXTERNALLY, SEE ENGINE MANUFACTURERS LITERATURE.
 NOTE 3: IT IS RECOMMENDED THAT THE GENERATOR AND MAINS SWITCHING DEVICES ARE MECHANICALLY AND ELECTRICALLY INTERLOCKED.
 NOTE 4: MAINS BREAKER CLOSED OUTPUT SHOULD BE CONFIGURED FOR DE-ENERGISE CLOSE MAINS, AND USE THE NORMALLY CLOSED CONTACTS OF MBOC.

NOTE: A larger version of the typical wiring diagram is included in the products operator manual. Refer to DSE Publication: 057-218 DSE6010 MKII & DSE6020 MKII Operators Manual

REQUIREMENTS FOR UL CERTIFICATION

Specification	Description
Screw Terminal Tightening Torque	• 4.5 lb-in (0.5 Nm)
Conductors	<ul style="list-style-type: none"> • Terminals suitable for connection of conductor size 24 AWG to 12 AWG (0.5 mm² to 2.0 mm²). • Conductor protection must be provided in accordance with NFPA 70, Article 240 • Low voltage circuits (35 V or less) must be supplied from the engine starting battery or an isolated secondary circuit. • The communication, sensor, and/or battery derived circuit conductors shall be separated and secured to maintain at least 1/4" (6 mm) separation from the generator and mains connected circuit conductors unless all conductors are rated 600 V or greater.
Current Inputs	• Must be connected through UL Listed or Recognized isolating current transformers with the secondary rating of 5 A max.
Communication Circuits	• Must be connected to communication circuits of UL Listed equipment
DC Output Pilot Duty	• 0.5 A
Mounting	<ul style="list-style-type: none"> • Suitable for use in type 1 Enclosure Type rating with surrounding air temperature -22 °F to +158 °F (-30 °C to +70 °C) • Suitable for pollution degree 3 environments when voltage sensing inputs do not exceed 300 V. When used to monitor voltages over 300 V device to be installed in an unventilated or filtered ventilation enclosure to maintain a pollution degree 2 environment.
Operating Temperature	• -22 °F to +158 °F (-30 °C to +70 °C)
Storage Temperature	• -40 °F to +158 °F (-40 °C to +70 °C)

DEEP SEA ELECTRONICS PLC
DSE6010 MKII & DSE6020 MKII
Installation Instructions

EDITING A PARAMETER

- Press the and (✓) buttons together to enter the editor mode.
- Press the (up) or (down) navigation buttons to cycle through the front panel editor in increments of 100.
- Press the or to cycle through the front panel editor in increments of 1.
- When viewing the parameter to be edited, press the (✓) button, the value begins to flash.
- Press the or navigation buttons to adjust the value to the required setting.
- Press the (✓) button to save the current value, the value ceases flashing.
- Press and hold the (✓) button to save and exit the editor, the configuration icon is removed from the display.

NOTE: Pressing and holding the or navigation buttons or or gives an auto-repeat functionality. Values can be changed quickly by holding the navigation buttons for a prolonged period of time.

DIMENSIONS	PANEL CUTOUT	TERMINALS
216 mm x 158 mm x 42 mm (8.5" x 6.2" x 1.6")	182 mm x 137 mm (7.2" x 5.4")	Tightening Torque: 0.5 Nm (4.5 lb-in) Conductor Size: 0.5 mm ² to 2.5 mm ² (AWG 24 to AWG 10)

NOTE: Terminals 29, 30, 31 & 32 are not fitted to DSE6010 MKII

<p>Deep Sea Electronics PLC Tel: +44 (0)1723 890099 Fax: +44 (0)1723 893303 Email: sales@deepseapl.com Web: www.deepseapl.com</p>	<p>Deep Sea Electronics Inc Tel: +1 (815) 316-8706 Fax: +1 (815) 316-8708 Email: sales@deepseausa.com Web: www.deepseausa.com</p>
--	--

Configuration Parameters – Module (Page 1)						
101	Contrast	0 (%)	118	Use Module Charge Alt	On (1), Off (0)	
102	Fast Loading Enabled	On (1), Off (0)	119	Disable CAN Speed Control	On (1), Off (0)	
103	All Warnings Latched	On (1), Off (0)	120	CT Position	Gen (0), Load(1)	
104	Lamp Test At Startup	On (1), Off (0)	121	Generator Voltage Display	On (1), Off (0)	
105	Power Save Mode Enable	On (1), Off (0)	122	Mains Voltage Display	On (1), Off (0)	
106	RESERVED		123	Generator Frequency Display	On (1), Off (0)	
107	RESERVED		124	Mains Frequency Display	On (1), Off (0)	
108	Event Log Display Format	On (1), Off (0)	125	Current Display	On (1), Off (0)	
109	Power Up Mode	0 (Power Up Mode)	126	kW Display	On (1), Off (0)	
110	DTC String Enable	On (1), Off (0)	127	kVAr Display	On (1), Off (0)	
111	RESERVED		128	kVA Display	On (1), Off (0)	
112	Pin Protected Maintenance Reset	On (1), Off (0)	129	pf Display	On (1), Off (0)	
113	Stop Button Coldown	On (1), Off (0)	130	kWh Display	On (1), Off (0)	
114	Use Module Oil Pressure	On (1), Off (0)	131	kVArh Display	On (1), Off (0)	
115	Use Module Coolant Temp	On (1), Off (0)	132	kVAh Display	On (1), Off (0)	
116	Use Module Engine Hours	On (1), Off (0)	133	Hold Start Button to Crank	On (1), Off (0)	
117	Use Module RPM	On (1), Off (0)				

Configuration Parameters – CAN Application (Page 2)					
201	CAN Alternative Engine Speed	On (1), Off (0)	203	CAN ECU Data Fail Action	0 (Action)
202	CAN ECU Data Fail Enable	On (1), Off (0)	204	CAN ECU Data Fail Delay	0 s

Configuration Parameters – Digital Inputs (Page 3)					
301	Digital Input A Source	0 (Input Source)			
302	Digital Input A Polarity	0 (Polarity)			
303	Digital Input A Action (If Source = User Config)	0 (Action)			
304	Digital Input A Arming (If Source = User Config)	0 (Arming)			
305	Digital Input A Activation Delay (If Source = User Config)	0 s			
306	Digital Input B Source	0 (Input Source)			
307	Digital Input B Polarity	0 (Polarity)			
308	Digital Input B Action (If Source = User Config)	0 (Action)			
309	Digital Input B Arming (If Source = User Config)	0 (Arming)			
310	Digital Input B Activation Delay (If Source = User Config)	0 s			
311	Digital Input C Source	0 (Input Source)			
312	Digital Input C Polarity	0 (Polarity)			
313	Digital Input C Action (If Source = User Config)	0 (Action)			
314	Digital Input C Arming (If Source = User Config)	0 (Arming)			
315	Digital Input C Activation Delay (If Source = User Config)	0 s			
316	Digital Input D Source	0 (Input Source)			
317	Digital Input D Polarity	0 (Polarity)			
318	Digital Input D Action (If Source = User Config)	0 (Action)			
319	Digital Input D Arming (If Source = User Config)	0 (Arming)			
320	Digital Input D Activation Delay (If Source = User Config)	0 s			
321	Digital Input E Source	0 (Input Source)			
322	Digital Input E Polarity	0 (Polarity)			
323	Digital Input E Action (If Source = User Config)	0 (Action)			
324	Digital Input E Arming (If Source = User Config)	0 (Arming)			
325	Digital Input E Activation Delay (If Source = User Config)	0 s			
326	Digital Input F Source	0 (Input Source)			
327	Digital Input F Polarity	0 (Polarity)			
328	Digital Input F Action (If Source = User Config)	0 (Action)			
329	Digital Input F Arming (If Source = User Config)	0 (Arming)			
330	Digital Input F Activation Delay (If Source = User Config)	0 s			
331	Analogue Input A (Set As Digital) Source	0 (Input Source)			
332	Analogue Input A (Set As Digital) Polarity	0 (Polarity)			
333	Analogue Input A (Set As Digital) Action (If Source = User Config)	0 (Action)			
334	Analogue Input A (Set As Digital) Arming (If Source = User Config)	0 (Arming)			
335	Analogue Input A (Set As Digital) Activation Delay (If Source = User Config)	0 s			
336	Analogue Input B (Set As Digital) Source	0 (Input Source)			
337	Analogue Input B (Set As Digital) Polarity	0 (Polarity)			
338	Analogue Input B (Set As Digital) Action (If Source = User Config)	0 (Action)			
339	Analogue Input B (Set As Digital) Arming (If Source = User Config)	0 (Arming)			
340	Analogue Input B (Set As Digital) Activation Delay (If Source = User Config)	0 s			
341	Analogue Input C (Set As Digital) Source	0 (Input Source)			
342	Analogue Input C (Set As Digital) Polarity	0 (Polarity)			
343	Analogue Input C (Set As Digital) Action (If Source = User Config)	0 (Action)			
344	Analogue Input C (Set As Digital) Arming (If Source = User Config)	0 (Arming)			
345	Analogue Input C (Set As Digital) Activation Delay (If Source = User Config)	0 s			
346	Analogue Input D (Set As Digital) Source	0 (Input Source)			
347	Analogue Input D (Set As Digital) Polarity	0 (Polarity)			
348	Analogue Input D (Set As Digital) Action (If Source = User Config)	0 (Action)			
349	Analogue Input D (Set As Digital) Arming (If Source = User Config)	0 (Arming)			
350	Analogue Input D (Set As Digital) Activation Delay (If Source = User Config)	0 s			

Pressure Sensor List					
Index	Type	Index	Type	Index	Type
0	Not used	0	Not Used	0	Not Used
1	Dig Closed for Alarm	1	Dig Closed for Alarm	1	Dig Closed for Alarm
2	Dig Open for Alarm	2	Dig Open for Alarm	2	Dig Open for Alarm
3	VDO 5 Bar	3	VDO 120 °C	3	VDO Ohm (10-180)
4	VDO 10 Bar	4	Datcon High	4	VDO Tube (90-0)
5	Datcon 5 Bar	5	Datcon Low	5	US Ohm (240-33)
6	Datcon 10 Bar	6	Murphy	6	GM Ohm (0-90)
7	Datcon 7 Bar	7	Cummins	7	GM Ohm (0-30)
8	Murphy 7 Bar	8	PT100	8	Ford (73-10)
9	CMB812	9	Veglia	9	User Defined
10	Veglia	10	Beru		
11	User Defined	11	User Defined		

Configuration Parameters – Outputs (Page 4)					
401	Digital Output A Source	0 (Output Source)	407	Digital Output D Source	0 (Output Source)
402	Digital Output A Polarity	0 (Output Polarity)	408	Digital Output D Polarity	0 (Output Polarity)
403	Digital Output B Source	0 (Output Source)	409	Digital Output E Source	0 (Output Source)
404	Digital Output B Polarity	0 (Output Polarity)	410	Digital Output E Polarity	0 (Output Polarity)
405	Digital Output C Source	0 (Output Source)	411	Digital Output F Source	0 (Output Source)
406	Digital Output C Polarity	0 (Output Polarity)	412	Digital Output F Polarity	0 (Output Polarity)

Configuration Parameters – Timers (Page 5)					
501	Mains Transient Delay	510	Return Delay	519	Delayed Load Output 2
502	Start Delay	511	Cooling Time	520	Delayed Load Output 3
503	Preheat Timer	512	ETS Solenoid Hold	521	Delayed Load Output 4
504	Crank Time	513	Failed To Stop Delay	522	Power Save Mode Delay
505	Crank Rest Time	514	Generator Transient Delay	523	RESERVED
506	Smoke Limiting	515	Transfer Time	524	Page Timer
507	Smoke Limiting Off	516	Breaker Trip Pulse	525	Cooling Time at Idle
508	Safety On Delay	517	Breaker Close Pulse	526	Manual Crank Limit
509	Warm Up Time	518	Delayed Load Output 1		

Configuration Parameters – Generator (Page 6)					
601	Alternator Fitted	On (1), Off (0)	620	Over Frequency Warning Enable	On (1), Off (0)
602	Alternator Poles	0	621	Over Frequency Warning Return	0.0 Hz
603	Under Voltage Shutdown Enable	On (1), Off (0)	622	Over Frequency Warning Trip	0.0 Hz
604	Under Voltage Trip Shutdown	0 V	623	Over Frequency Shutdown Enable	On (1), Off (0)
605	Under Voltage Warning Enable	On (1), Off (0)	624	Over Frequency Shutdown Trip	0.0 Hz
606	Under Voltage Warning Trip	0 V	625	AC System	0 (Ac System)
607	RESERVED		626	CT Primary	0 A
608	Loading Voltage	0 V	627	Full Load Rating	0 A
609	Over Voltage Warning Enable	On (1), Off (0)	628	Immediate Over Current Enable	On (1), Off (0)
610	Over Voltage Warning Return	0 V	629	Delayed Over Current Alarm Enable	On (1), Off (0)
611	Over Voltage Warning Trip	0 V	630	Delayed Over Current Alarm Action	0 (Action)
612	Over Voltage Shutdown Trip	0 V	631	Over Current Delay Time	0 s
613	Under Frequency Shutdown Enable	On (1), Off (0)	632	Over Current Trip	0 %
614	Under Frequency Shutdown Trip	0.0 Hz	633	kW Rating	0 kW
615	Under Frequency Warning Enable	On (1), Off (0)	634	Over kW Protection Enable	On (1), Off (0)
616	Under Frequency Warning Trip	0.0 Hz	635	Over kW Protection Action	0 (Action)
617	RESERVED		636	Over kW Protection Trip	0 %
618	Loading Frequency	0.0 Hz	637	Over kW Protection Trip Delay	0 s
619	Nominal Frequency	0.0 Hz			

Configuration Parameters – Mains (Page 7)					
701	AC System	0 (AC System)	709	Over Voltage Level Trip	0 V
702	Mains Failure Detection	On (1), Off (0)	710	Under Frequency Enable	On (1), Off (0)
703	Immediate Mains Dropout	On (1), Off (0)	711	Under Frequency Trip	0.0 Hz
704	Under Voltage Enable	On (1), Off (0)	712	Under Frequency Return	0.0 Hz
705	Under Voltage Level	0 V	713	Over Frequency Enable	On (1), Off (0)
706	Under Voltage Return	0 V	714	Over Frequency Return	0 Hz
707	Over Voltage Enable	On (1), Off (0)	715	Over Frequency Trip	0.0 Hz
708	Over Voltage Return	0 V			

Configuration Parameters – Engine (Page 8)					
801	Start Attempts	0	819	High Battery Voltage Enable	On (1), Off (0)
802	Over Speed Overshoot	0 %	820	High Battery Voltage Return	0.0 V
803	Over Speed Delay	0 s	821	High Battery Voltage Trip	0.0 V
804	Gas Choke Timer (Gas Engine Only)	0 s	822	High Battery Voltage Warning Delay	0 s
805	Gas On Delay (Gas Engine Only)	0 s	823	Charge Alt Shutdown Enable	On (1), Off (0)
806	Gas Ignition Off Delay (Gas Engine Only)	0 s	824	Charge Alt Shutdown Trip	0.0 V
807	Crank Disconnect On Oil Pressure Enable	On (1), Off (0)	825	Charge Alt Shutdown Delay	0 s
808	Check Oil Pressure Prior To Starting	On (1), Off (0)	826	Charge Alt Warning Enable	On (1), Off (0)
809	Crank Disconnect On Oil	0.00 Bar	827	Charge Alt Warning Trip	0.0 V
810	Crank Disconnect On Frequency	0.0 Hz	828	Charge Alt Warning Delay	0 s
811	Crank Disconnect On Engine Speed	0 RPM	829	Low Battery Start Arming	On (1), Off (0)
812	Under Speed Enable	On (1), Off (0)	830	Low Battery Start Threshold	0.0 V
813	Under Speed Trip	0 RPM	831	Low Battery Start Delay	0 s
814	Over Speed Trip	0 RPM	832	Low Battery Start Run Time	0 s
815	Low Battery Voltage Enable	On (1), Off (0)	833	Magnetic Pickup Fitted	On (1), Off (0)
816	Low Battery Voltage Trip	0.0 V	834	Flywheel Teeth	0
817	Low Battery Voltage Return	0.0 V	835	Crank Disconnect On Oil Pressure Delay	0 s
818	Low Battery Voltage Delay	0:00:00			

Sensor Type					
Index	Type	Index	Type	Index	Type
0	Percentage Sensor	0	2 Phase 3 Wire (L1-L2)	0	Always
1	Pressure Sensor	1	2 Phase 3 Wire (L1-L3)	1	From Safety On
2	Temperature Sensor	2	3 Phase 3 Wire	2	From Starting
		3	3 Phase 4 Wire	3	Never
		4	3 Phase 4 Wire (Delta)		
		5	Single Phase 2 Wire		

Functionality in DSE6010 and DSE6020 MKII
Functionality in DSE6020 MKII only

Configuration Parameters – Analogue Inputs (Page 9)					
901	Low Oil Pressure Enable	On (1), Off (0)			
902	Low Oil Pressure Trip	0 Bar			
903	Oil Pressure Sender Open Circuit	On (1), Off (0)			
904	Analogue Input A Sensor Usage	Digital Input (0), Flexible (1), Oil Pressure (3) Sensor			
905	Analogue Input A Flexible Sensor Type	0 (Sensor Type)			
906	Analogue Input A Sensor Selection	0 (Pressure, Temperature, Percentage Sensor List)			
907	Flexible Sensor A Arming	0 (Arming)			
908	Flexible Sensor A Low Alarm Action	0 (Action)			
909	Flexible Sensor A Low Alarm Trip	0 % / Bar / °C			
910	RESERVED				
911	Flexible Sensor A Low Pre-Alarm Enable	On (1), Off (0)			
912	Flexible Sensor A Low Pre-Alarm Trip	0 % / Bar / °C			
913	Flexible Sensor A Low Pre-Alarm Return	0 % / Bar / °C			
914	RESERVED				
915	Flexible Sensor A High Pre-Alarm Enable	On (1), Off (0)			
916	Flexible Sensor A High Pre-Alarm Return	0 % / Bar / °C			
917	Flexible Sensor A High Pre-Alarm Trip	0 % / Bar / °C			
918-919	RESERVED				
920	Flexible Sensor A High Alarm Action	0 (Action)			
921	Flexible Sensor A High Alarm Trip	0 % / Bar / °C			
922	RESERVED				
923	Analogue Input B Sensor Usage	Digital Input (0), Temperature (2) Sensor			
924	Analogue Input B Sensor Selection	0 (Pressure, Temperature, Percentage Sensor List)			
925	High Engine Temperature Trip	0.00 °C			
926	Temperature Sender Open Circuit	On (1), Off (0)			
927	Analogue Input C Sensor Usage	Digital Input (0), Flexible (1), Fuel Level (2) Sensor			
928	Analogue Input C Flexible Sensor Type	0 (Sensor Type)			
929	Analogue Input C Sensor Selection	0 (Pressure, Temperature, Percentage Sensor List)			
930	Flexible Sensor C Arming	0 (Arming)			
931	Flexible Sensor C Low Alarm Action	0 (Action)			
932	Flexible Sensor C Low Alarm Trip	0 % / Bar / °C			
933	RESERVED				
934	Flexible Sensor C Low Pre-Alarm Enable	On (1), Off (0)			
935	Flexible Sensor C Low Pre-Alarm Trip	0 % / Bar / °C			
936	Flexible Sensor C Low Pre-Alarm Return	0 % / Bar / °C			
937	RESERVED				
938	Flexible Sensor C High Pre-Alarm Enable	On (1), Off (0)			
939	Flexible Sensor C High Pre-Alarm Return	0 % / Bar / °C			
940	Flexible Sensor C High Pre-Alarm Trip	0 % / Bar / °C			
941-942	RESERVED				
943	Flexible Sensor C High Alarm Action	0 (Action)			
944	Flexible Sensor C High Alarm Trip	0 % / Bar / °C			
945-946	RESERVED				
947	Fuel Sensor C Low Shutdown Enable	On (1), Off (0)			
948	Fuel Sensor C Low Shutdown Trip	0 %			
949	Fuel Sensor C Low Shutdown Delay	0 s			
950	Fuel Sensor C Low Pre-Alarm Enable	On (1), Off (0)			
951	Fuel Sensor C Low Pre-Alarm Trip	0 %			
952	Fuel Sensor C Low Pre-Alarm Return	0 %			
953	Fuel Sensor C Low Pre-Alarm Delay	0 s			
954	Fuel Sensor C High Pre-Alarm Enable	On (1), Off (0)			
955	Fuel Sensor C High Pre-Alarm Return	0 %			
956	Fuel Sensor C High Pre-Alarm Trip	0 %			
957	Fuel Sensor C High Pre Alarm Delay	0 s			
959	Fuel Sensor C High Alarm Action	0 (Action)			
960	Fuel Sensor C High Alarm Trip	0 %			
961	Fuel Sensor C High Alarm Delay	0 s			
962	Analogue Input D Sensor Usage	Digital Input (0), Flexible (1), Oil Pressure (3) Sensor			
963	Analogue Input D Sensor Type	0 (Sensor Type)			
964	Analogue Input D Sensor Selection	0 (Pressure / Temperature / Percentage Sensor List)			
965	Analogue Input D Sensor Signal	Current (0), Resistive (1), Voltage (2)			
966	Flexible Sensor D Arming	0 (Arming)			
967	Flexible Sensor D Low Alarm Enable	On (1), Off (0)			
968	Flexible Sensor D Low Alarm Trip	0 % / Bar / °C			
969	RESERVED				
970	Flexible Sensor D Low Pre-Alarm Enable	On (1), Off (0)			
971	Flexible Sensor D Low Pre-Alarm Trip	0 % / Bar / °C			
972	Flexible Sensor D Low Pre-Alarm Return	0 % / Bar / °C			
973	RESERVED				
974	Flexible Sensor D High Pre-Alarm Enable	On (1), Off (0)			
975	Flexible Sensor D High Pre-Alarm Return	0 % / Bar / °C			
976	Flexible Sensor D High Pre-Alarm Trip	0 % / Bar / °C			
977-978	RESERVED				
979	Flexible Sensor D High Alarm Action	0 (Action)			
980	Flexible Sensor D High Alarm Trip	0 % / Bar / °C			
981	RESERVED				
982	Fuel Sensor Units	0 (Fuel Sensor Units)			
983	Fuel Tank Size	0 (Stop)			
984	Fuel Pump Enable	On (1), Off (0)			
985	Fuel Pump On Level	0 %			
986	Fuel Pump Off Level	0 %			